Comfort Zone CZ6C Clamp Replacement

Replace the clamp of your Comfort Zone CZ6C so your desk fan can securely attach onto surfaces.

Written By: Samantha Galicinao



INTRODUCTION

If your Comfort Zone CZ6C loosely attaches onto surfaces, then this simple, two-step guide will help you replace the clamp.

TOOLS:

- Phillips #0 Screwdriver (1)

PARTS:


- Replacement Clamp (1)


Step 1 — Clamp




- Turn the Comfort Zone CZ6C onto its backside.
- Locate the center hinge screw.

Step 2

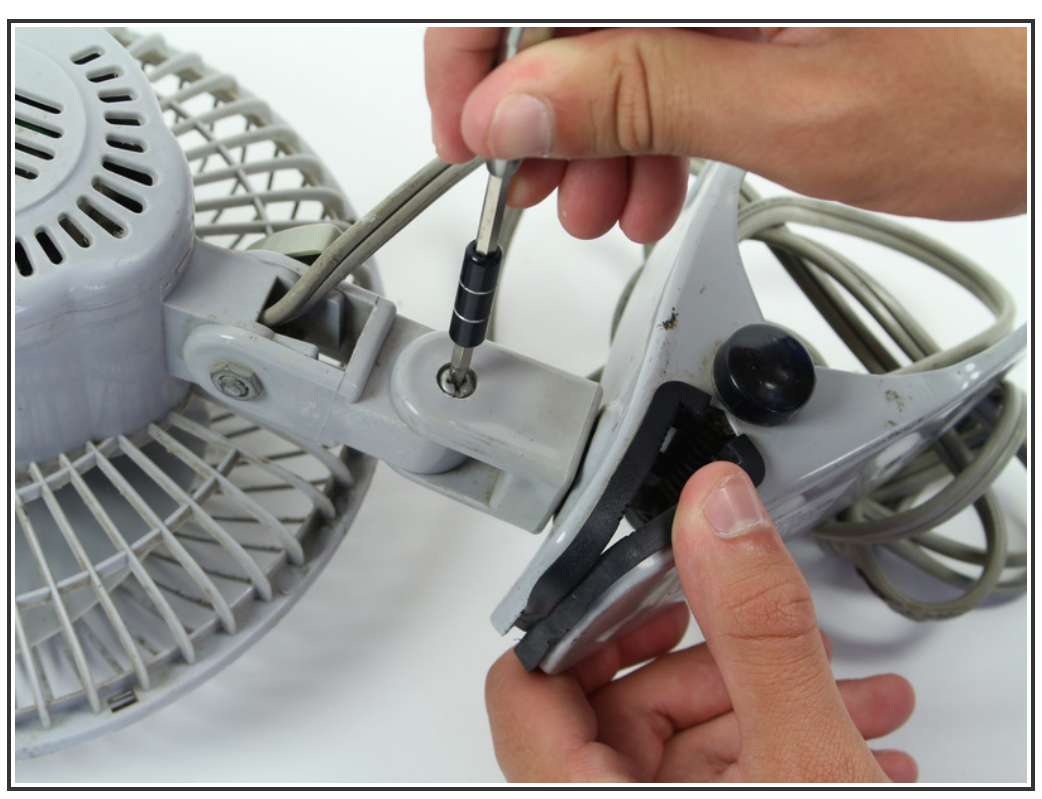

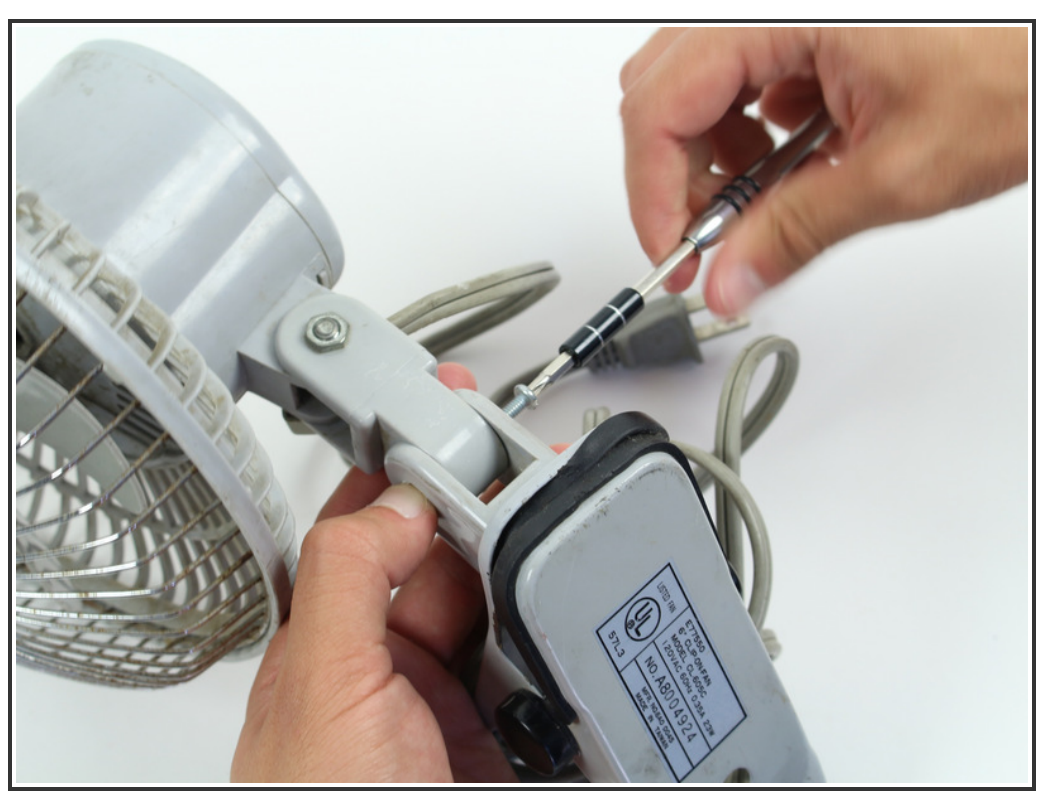

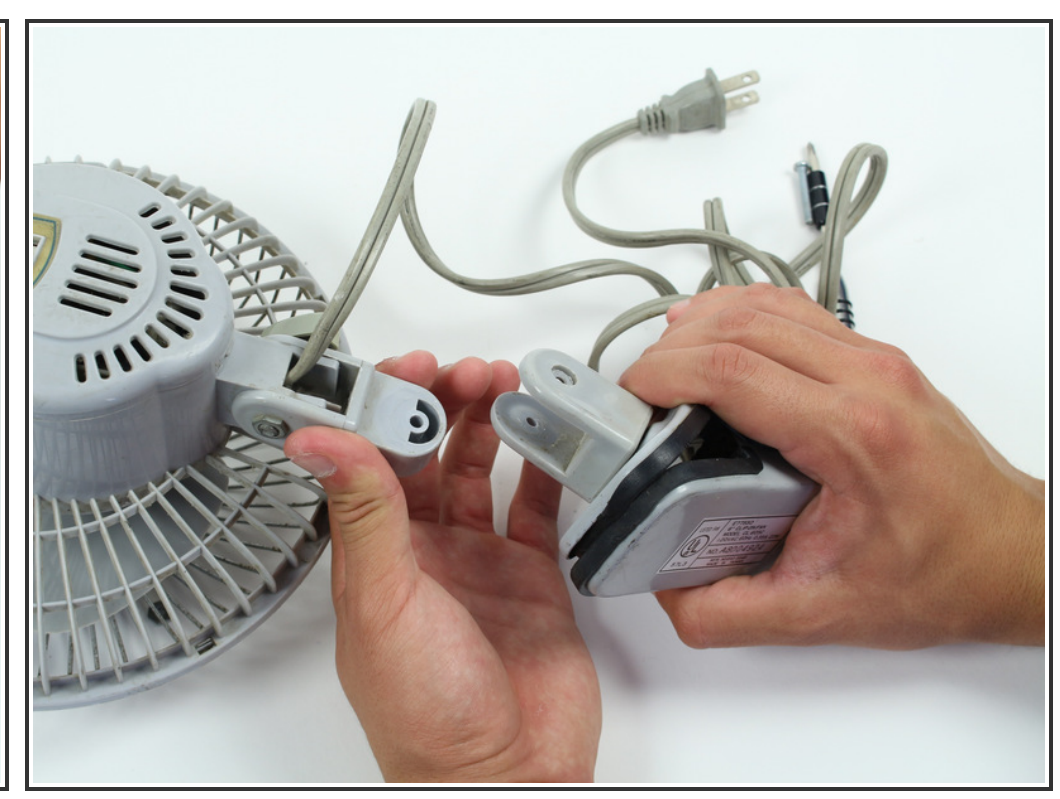

- With a Philips screwdriver, remove the center hinge screw.
- Once the center hinge screw is completely removed from its hole, detach the clamp from the Comfort Zone CZ6C.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 07:56:36 PM.